

Introducing **QuikFix** from



End frustrating screw replacements forever!

Problem temple screws: a thing of the past!

QuikFix means: stop trying to find the “right” screw for ready made sunwear or unidentifiable frames.

QuikFix is the riveting system **time saver** you need to produce a neat professional look.

Use Western’s **QuikFix** to easily replace missing screws in seconds.


Reduce your screw inventory. Keep on hand screws for your product and use **QuikFix** for all else!

Using the **QuikFix** riveting system is as easy as 1 - 2 - 3

1. Insert the appropriately colored **QuikFix** rivet in the hinge barrel.



2. Cut off excess rivet stem leaving approximately 2mm exposed beyond the hinge.

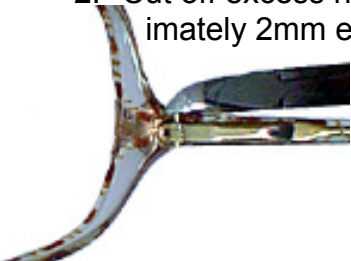


3. Using the Cupped Point and Solid Anvil compress the rivet in the hinge.




Using Western's new **QuikFix** riveting system you can easily replace a damaged screw in seconds, producing a neat, professional looking result.


Replacement points, anvils and rivets for **SHOOTOUT**

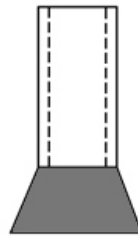


#2042AN
2.0mm hollow
Anvil Narrow

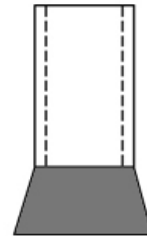


#2042A
2.7mm hollow
Anvil

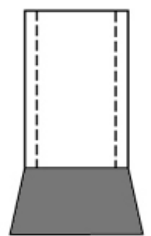


#2042AW
3mm hollow
Anvil Wide

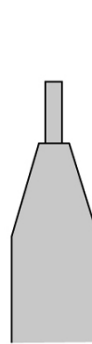


#2042P
Hinge Screw Punch

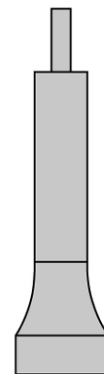

#2042EP
Eyewire Screw Punch

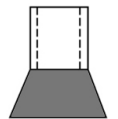


#2042EA
Eye Anvil

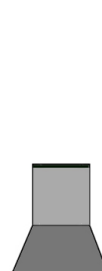


#2042AS
Anvil Solid



#2042PF
Point Flare

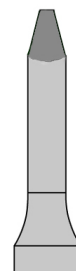

#2042PS
Point Slot

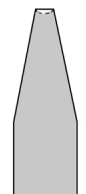

#2042PC
Point Cupped

#2042 **QuikFix** Rivet “Silver” Vial of 100
 #2042 **QuikFix** Rivet “Gold” Vial of 100
 #2042 **QuikFix** Rivet “Gunmetal” Vial of 100

#2042 **SHOOTOUT** Frame Repair Multi-Tool

800.423.3294